

Интегрированные камеры:

3S: N1072; N3072; N9071;

Acti: ACM1511; ACM3511; ACM5611; ACM8201; TCM3511;

Arecont Vision: AV1300; AV1305; AV2100; AV3100; AV3130;

Aviosys: 9060; 9060SL; 9100B;

Axis: 205; 206; 206M; 206W; 207; 207MW; 207W; 209FD; 209FD-R; 209MFD; 210; 2100; 210A; 211; 2110; 211A; 211M; 211W; 212; 212 PTZ; 2120; 213; 214; 215 PTZ; 216FD; 221; 223M; 225FD; 230; 231D; 231D+; 232D; 232D+; 233D; 2400; 2401; 240Q; 2411; 241Q; 241QA; 241S; 241SA; 2420; 242S; 243Q; M1011; M1011-W; M1031-W; M1054; M1103; M1104; M1113; M1114; M3113-R; M3114-R; M3203; M3204; M7010; M7014; P1311; P1343; P1344; P1346; P1347; P3343; P3344; P5532; P7224; Q1755; Q1755-E; Q6032-E; Q7404;

Beward: N1000; N1250; N13100; N61XX; N63XX; N6601; N71XX; N73XX;

Beward BD: BD133; BD2070DV; BD3370; BD3570; BD4070; BD4070D; BD4070DV; BD4070H; BD4330; BD4330D; BD4330DH; BD4330H; BD4330R; BD4330RV; BD4330RVH; BD4370; BD4370D; BD4370RV; BD4570; BD75-5;

Brickcom: FB-100Ae; PZ-040E; WOB-100Ae;

Evidence: Apix-10ZBox/M1; Apix-36ZDome/D1; Apix-Bullet/M2; Apix-Bullet/M2 Lite;

JVC: VN-V225U; VN-V25U; VN-V26U; VN-V686U; VN-X35U;

Mobotix: D10; D24M-Sec-Night; D24M-Secure; M10; M12; M22; M22M-IT; M24M-Sec-CSVario; M24M-Sec-Night; M24M-Secure;

Panasonic: BB-HCM311; BB-HCM331A; BB-HCM381; BB-HCM481; BB-HCM511; BB-HCM515; BB-HCM531; BL-C1; BL-C10; BL-C111; BL-C20; BL-C30A;

Panasonic I-Pro: WV-NF284; WV-NP1000; WV-NP1004; WV-NP240; WV-NP502; WV-NS202;

Samsung: SNB-5000;

Sanyo: VCC-HD2500P;

Sony: SNC-CS50P; SNC-P1; SNC-RZ25; SNC-RZ25N; SNC-RZ25P; SNC-RZ50P;

Trendnet: TV-IP110; TV-IP201; TV-IP252P; TV-IP312; TV-IP410; TV-IP512P;

Vivotek: MD7560;